


### Removal and installation of lamp unit bulbs

---

Bulbs can be replaced from direction of engine compartment.

Bulbs are accessible upon removal of closing cover (6).


- 1 Turnsignal lamp
- 2 Lamp unit
- 3 Adjusting screw for height adjustment
- 4 Adjusting screw for lateral adjustment
- 5 Adjusting screw for fog lamp
- 6 Closing cover

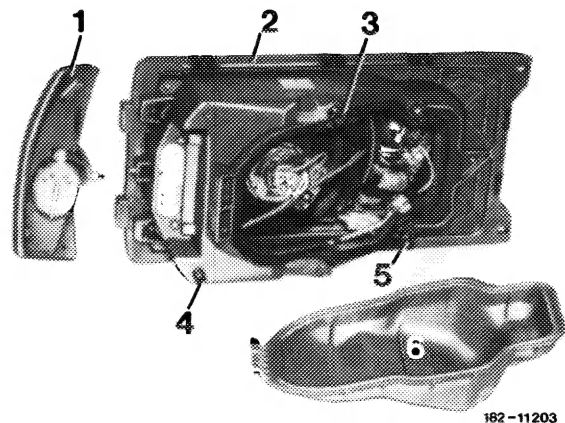

### Removal and installation of turnsignal lamp bulb

---

- 1 Remove turnsignal lamp (82-052).
- 2 Pull off electric connection, turn socket counter-blockwise (or unclip, depending on lamp unit make) and remove.

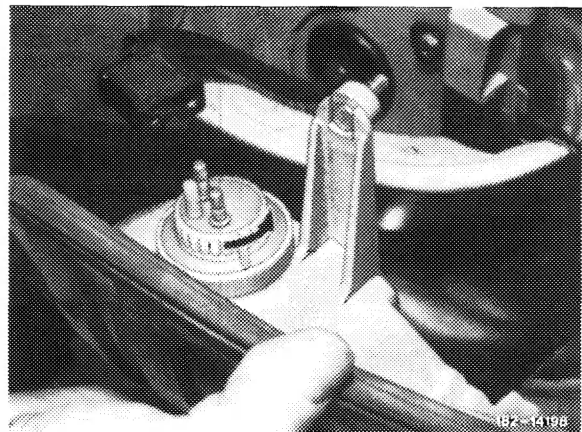

- 3 Remove bulb out of socket by means of a light left-hand turn (bayonet lock).

**Note:** When installing bulbs, pay attention to correct seat of locating pins.

Handle new bulb with tissue paper or the like only.

Insert only bulb with specified number of watts.

